

Ref.	Denomination	Ref.	Denomination
01KD050001	N. 1. Screw for KD-3000/5000	01KD140039	N.39. Hinge for KD-3000/14000
01KD140001	N. 1. Screw for KD-6500/14000	01KD050040	N.40. Plug forKD-3000/5000
01KD140002	N. 2. Washer for KD-3000/14000	01KD140040	N.40. Plug for KD-6500/14000
01KD140003	N. 3. Screw for KD-3000/14000	01KD050041	N.41. Distributor for KD- 3000/5000
01KD140004	N. 4. Plug for KD-3000/14000	01KD120041	N.41. Distributor for KD- 6500/12000
01KD140005	N. 5. Seal for KD-3000/14000 35x55x10	01KD140041	N.41. Distributor for KD-14000
01KD140006	N. 6. Oil level indicator KD-3000/14000	01KD050042	N.42. Gasket for KD-3000/5000
01KD050007	N. 7. Bearing for KD-3000/5000 6207	01KD140042	N.42. Gasket for KD-6500/14000
01KD140007	N. 7. Bearing for KD-6500/14000 6307	01KD030043	N.43. Body for KD- 3000
01KD050008	N. 8. Attack gear 49 teeth KD-3000/5000	01KD040043	N.43. Body for KD- 4000
01KD140008	N. 8. Attack gear 55 teeth KD-6500/14000	01KD050043	N.43. Body for KD- 5000
01KD141008	N. 8. Attack gear 1000 rpm KD-6500/14000	01KD060043	N.43. Body for KD- 6500
01KD140009	N. 9. Nipple 90 for KD-3000/14000	01KD080043	N.43. Body for KD- 8000
01KD140010	N.10. Bearing for KD-3000/14000 6304	01KD100043	N.43. Body for KD-10000
01KD140011	N.11. Oil sight glass KD-3000/14000	01KD120043	N.43. Body for KD-12000
01KD030012	N.12. Oil tube for KD- 3000	01KD140043	N.43. Body for KD-12000
01KD040012	N.12. Oil tube for KD- 4000	01KD030044	N.44. Vane for KD- 3000 (160x57x7,5) 4
01KD050012	N.12. Oil tube for KD- 5000	01KD040044	N.44. Vane for KD- 4000 (210x57x7,5) 4
01KD060012	N.12. Oil tube for KD- 6500	01KD050044	N.44. Vane for KD- 5000 (265x57x7,5) 4
01KD080012	N.12. Oil tube for KD- 8000	01KD060044	N.44. Vane for KD- 6500 (240x64x7,5) 6
01KD100012	N.12. Oil tube for KD-10000	01KD080044	N.44. Vane for KD- 8000 (300x64x7,5) 6
01KD120012	N.12. Oil tube for KD-12000	01KD100044	N.44. Vane for KD-10000 (360x64x7,5) 6
01KD140012	N.12. Oil tube for KD-14000	01KD140044	N.44. Vane for KD-12/14000 (425x64x7,5) 6
01KD140013	N.13. Elastic pin for KD-3000/14000	01KD030045	N.45. Rotor for KD- 3000
01KD050014	N.14. Key for KD-3000/5000	01KD040045	N.45. Rotor for KD- 4000
01KD140014	N.14. Key for KD-6500/14000	01KD050045	N.45. Rotor for KD- 5000
01KD140015	N.15. Drop feeder for KD-3000/14000	01KD060045	N.45. Rotor for KD- 6500
01KD140016	N.16. Washer for KD-3000/14000	01KD080045	N.45. Rotor for KD- 8000
01KD140017	N.17. Screw for KD-3000/14000	01KD100045	N.45. Rotor for KD-10000
01KD050018	N.18. Gasket for KD-3000/5000	01KD120045	N.45. Rotor for KD-12000
01KD140018	N.18. Gasket for KD-6500/14000	01KD140045	N.45. Rotor for KD-14000
01KD050019	N.19. Outlet Ø 60 KD-3000/5000	01KD050046	N.46. Gasket for KD-3000/5000
01KD060019	N.19. Outlet Ø 60 KD-6500	01KD140046	N.46. Gasket for KD-6500/14000
01KD140019	N.19. Outlet Ø 80 KD-6500/14000	01KD050047	N.47. Gearbox for KD-3000/5000
01KD141019	N.19. Outlet Ø 100 KD-14000	01KD140047	N.47. Gearbox for KD-6500/14000
01KD052019	N.19. Double outlet Ø 60 KD-3000/5000	01KP050047	N.47. End cover for KDP-3000/5000
01KD062019	N.19. Double outlet Ø 60 KD-6500	01KP120047	N.47. End cover for KDP-6500/12000
01KD142019	N.19. Double outlet Ø 80 KD-6500/14000	01KD140048	N.48. Oil pump cover KD-3000/14000
01KD140020	N.20. O-Ring for KD-3000/14000	01KD140049	N.49. Oil pump gasket KD-3000/14000
01KD140021	N.21. Plug for KD-3000/14000	01KD140050	N.50. Oil pump attack gear KD-3000/14000
01KD050022	N.22. Conic distributor for KD-3000/5000	01KD140051	N.51. Oil pump gear KD-3000/14000
01KD140022	N.22. Conic distributor for KD-6500/14000	01KD140052	N.52. Lock nut for KD-3000/14000
01KD140023	N.23. Spring for KD-3000/14000	01KD050053	N.53. Gasket for KD-3000/5000
01KD140024	N.24. Outlet gasket KD-3000/14000	01KD140053	N.53. Gasket for KD-6500/14000
01KD140025	N.25. Outlet for KD-3000/14000	01KD050054	N.54. Gearbox cover for KD-3000/5000
01KD140026	N.26. Flange for KD-3000/14000	01KD140054	N.54. Gearbox cover for KD-6500/14000
01KD140027	N.27. Washer for KD-3000/14000	01KD140055	N.55. T-connection for KD-3000/14000
01KD140028	N.28. Handle for KD-3000/14000	01KD050056	N.56. Small gear 19 teeth KD-3000/5000
01KD050029	N.29. Distributor cover KD- 3000/5000	01KD140056	N.56. Small gear 28 teeth KD-6500/14000
01KD120029	N.29. Distributor cover KD- 6500/12000	01KD141056	N.56. Small gear 1000 rpm KD-6500/14000
01KD140029	N.29. Distributor cover KD-14000	01KD140057	N.57. Seal for KD-3000/14000 12x20x5
01KD050030	N.30. Gasket for KD-3000/5000	01KD140058	N.58. Pipette for KD-3000/14000
01KD140030	N.30. Gasket for KD-6500/14000	01KP120058	N.58. Nipple for KDP-3000/12000
01KD140031	N.31. Screw for KD-3000/14000	01KD140059	N.59. PTO Guard for KD-3000/14000
01KD140032	N.32. Washer for KD-3000/14000	01KD140060	N.60. Rotor plug for KD-3000/14000
01KD140033	N.33. Lubrication nipple for KD-3000/14000	01KD140061	N.61. 1/2" plug para KD-3000/14000
01KD050034	N.34. Bearing cover for KD-6500/14000	01KD140062	N.62. Nut for KD-3000/14000
01KD140034	N.34. Bearing cover for KD-3000/5000	01KD140063	N.63. PTO Guard screw KD-3000/14000
01KD141034	N.34. Water pump for KD-14000	01KP120064	N.64. Nipple for KDP-3000/12000
01KD050035	N.35. Bearing for KD-3000/5000 6207	01KP120065	N.65. Elbow 1/2 for KDP-3000/12000
01KD140035	N.35. Bearing for KD-6500/14000 6208	01KP120066	N.66. Nipple 1/8K for KDP-3000/12000
01KD050036	N.36. Seal for KD-3000/5000 40x55x8	01KD140067	N.67. Bracket for KD-3000/14000
01KD140036	N.36. Seal for KD-6500/14000 45x60x12	01KD050099	N.99. Accessories kit for KD-3000/5000
01KD140037	N.37. Plug M6 for KD-3000/14000	01KD060099	N.99. Accessories kit for KD-6500
01KD140038	N.38. Copper washer KD-3000/14000	01KD140099	N.99. Accessories kit for KD-6500/14000



KD



KD-14000



KDP

